








Täckplatta med vred för tidsströmbrytare och jalusibrytare resp. -knapp



| Specifikation | Artikelnr. | FE | PS | EAN |
|---|--------------------|----|----|---------------|
|  cremevit blank | 0666 01 | 5 | 01 | 4010337666011 |
|  kritvit blank | 0666 03 1854022 | 5 | 01 | 4010337666035 |
|  kritvit sidenmatt | 0666 27 1851853 | 5 | 01 | 4010337666271 |
|  antracit | 0666 28 1851854 | 5 | 11 | 4010337666288 |
|  alufärg | 0666 26 1851852 | 5 | 11 | 4010337666264 |
|  svart matt | 0666 005 | 5 | 11 | 4010337036586 |
|  grå matt | 0666 015 | 5 | 11 | 4010337081401 |

Hänvisningar

- Genom att byta ut de båda bifogade symbolskivorna för markis och tid kan denna täckplatta användas universellt.

Leveransen innehåller

- Symbolskivor för jalusi (,) och tid (15 till 120 min eller 30 till 60 min) ingår i leveransen.
